

## Linksys X6200 VDSL configuration

Log into the gateway:

1. Ensure your device is connected to the Router (preferably via cable)
2. Open a web browser
3. Type the following in the address bar at the top: **192.168.1.1**
4. Default Username: **admin**
5. Default Password: **password**
6. This should then give access to the routers user interface. \*  
\*\* (If the password is incorrect you will need to Factory Reset the router by pushing the Inset Reset button on the back for 10 seconds) \*\*

How to add correct settings for the NOW network:

1. From top menu select: **Setup**
2. From the sub-menu select: **Basic Setup**
3. Ensure **DSL** is selected
4. DSL Mode: **PTM**
5. VLAN: **Ticked**
6. VLAN ID: **10**
7. Internet Connection Type: **PPPoE**
8. Username: **(your NOW account ID)@nownz.co.nz**
9. Password: **Password**
10. Service Name: **(Left Blank)**
11. Keep Alive: **Ticked**
12. Optional Settings: **Don't change**
13. Router Address: **Don't change**
14. DHCP Server: **Enabled** (leave with default settings)
15. Timezone: **New Zealand** (bottom of list)
16. Select: **Save Settings** (from bottom of page, don't click Reboot)

Router will now reboot. When it comes back online you'll be good to go! If not, give NOW Technical Support a call.



**LINKSYS** Firmware Version: v1.0.00 (014)

Linksys X6200 **X6200**

**Basic Setup** | **Setup** | Quick Start | Wireless | Security | Storage | Access Policy | Application & Gaming | Administration | Status

Basic Setup | IPv6 Setup | DDNS | MAC Address Clone | Advanced Routing

**Language**  
Select your language: English

**Physical Setting**  
Physical Type:  DSL  Ethernet  
DSL Mode:  ATM  PTM  
VDSL2 Profiles: Auto  
Enable VLAN:   
VLAN ID: 10

**Internet Setup**  
Internet Connection Type: PPPoE  
PPPoE Settings  
User Name: (account ID)@nownz.co.nz  
Password: \*\*\*\*\*  
Service Name: \_\_\_\_\_  
 Connect on Demand - Max Idle Time: 15 Minutes  
 Keep Alive - Redial Period: 30 Seconds

Optional Settings (required by some Internet Service Providers)  
Host Name: LINKSYS00048  
Domain Name: \_\_\_\_\_  
MTU: Auto Size: 1500

**Network Setup**  
Router Address  
IP Address: 192 . 168 . 1 . 1  
Subnet Mask: 255.255.255.0  
Device Name: LINKSYSX6200

DHCP Server Setting  
DHCP Server:  Enable  Disable  DHCP Relay  
DHCP Relay Server: 0 . 0 . 0 . 0  
IP Reservation  
Start IP Address: 192.168.1.100  
Maximum Number of Users: 50  
IP Address Range: 192.168.1.100 to 149  
Client Lease Time: 0 minutes (0 means one day)  
WINS: 0 . 0 . 0 . 0

**Time Settings**  
Time Zone: [(GMT+12:00) New Zealand]  
 Automatically adjust clock for daylight saving changes.

**Reboot**  
Reboot

**Save Settings** Cancel Changes