

## Netcomm NF5 Fibre configuration

## Logging into the gateway:

- 1. Ensure your device is connected to the Router (preferably via cable)
- 2. Open a web browser
- 3. Type the following in the address bar at the top: 192.168.20.1
- 4. Default Username: admin
- 5. Default Password: admin
- 6. This should then give access to the routers user interface.\*
  \*\* (If the password is incorrect you will need to Factory Reset the router by pushing the Inset Reset button on the back for 10 seconds) \*\*

## How to add correct settings for the NOW network:

- 1. Select: Manually set up connection
- 2. At the bottom of the page select: Switch to Advanced View
- 3. From the top menu select: Network Setup
- 4. From the sub-menu select: Network Setup

On the following page set the following:

- 1. Wan Interface: Ethernet WAN
- 2. WAN Type: PPP over Ethernet
- 3. Username: (your NOW account ID)@nownz.co.nz
- 4. Password: password
- 5. Primary DNS: 202.137.240.39
- 6. Secondary DNS: 202.137.240.40
- 7. Service Name: NowNZ
- 8. Assigned IP address: (Leave Blank)
- 9. MTU: **0**
- 10. NAT: Enable
- 11. Multicast: Disable
- 12. IGMP Snooping: Unticked
- 13. VLAN Tagging: Unticked

You should now be connected to Fibre!

If your internet connection is still not working, give NOW Technical Support a call.

/											
	Ċ	мү	Ф	010	Ð	ول	29	ول	-19	6	
				() N	etCor	nmWi	reless				

Item	Setting
VAN Interface	Ethernet WAN 🔻 🖲 Active 🔘 Inactive
VAN Type	PPP over Ethernet
Isername	(Your NOW ID)@nownz.co.nz
assword	password
rimary DNS	202.137.240.39
econdary DNS	202.137.240.40
ervice Name	NOW NZ (optional)
ssigned IP Address	(optional)
πυ	0 (0 is auto)
IAT	V Enable
lulticast	Disable •
GMP Snooping	Enable
'LAN TAG	Enable 0 (range: 1~4094)
	Save